


## HVORDAN LESE MÅLESKJEMA FOR ROLL-RING

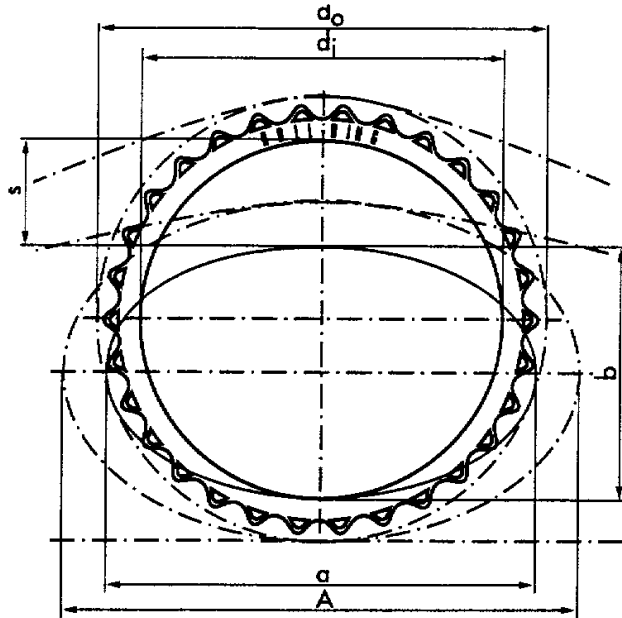

Type	05B30	06B30	08B26	08B30	10B30	12B26	12B30	16B30	20B30
d <sub>o</sub>	76,5	91,1	102,1	121,5	151,9	155,0	182,2	243,0	303,7
d <sub>i</sub>	65,0	73,0	84,5	98,0	122,0	127,6	145,0	203,0	244,0
s	20,0	25,0	24,0	28,0	30,0	35,0	40,0	50,0	60,0
a	79,0	88,0	102,0	117,0	143,0	150,0	173,0	231,0	280,0
b	45,0	51,0	60,0	70,0	92,0	92,0	105,0	162,0	192,0
A	104,0	122,0	135,8	161,6	198,8	209,5	241,7	311,0	390,0

### TEGNFORKLARING:

- S** Maksimum kompresjon av ROLL-RING®
- A** Delesirkeldiameter for ROLL-RING® under maksimum kompresjon
- d<sub>o</sub>** Delesirkeldiameter for ROLL-RING® uten kompresjon
- a** Innvendig diameter (x-akse) for ROLL-RING® under maksimum kompresjon
- d<sub>i</sub>** Innvendig diameter for ROLL-RING® uten kompresjon
- b** Innvendig diameter (y-akse) for ROLL-RING® under maksimum kompresjon

